

VI.5.3D-ADJSIM PROGRAM FCST HCL TECHNIQUE ADJSIM

Purpose

Technique ADJSIM sets whether an adjusted simulation will be performed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

ADJSIM(integer)

where integer is 0 or 1 specifying whether or not an adjusted simulation will be performed

Example

ADJSIM(1)

An adjusted simulation will be performed.